

Alternative GPIB commands

The following table lists alternative commands used by the IEEE-488.1 interface.

Command	Interpretation
SV:	"RD" Read DUT sensor
ST:	"RF" Read Air sensor
SS:	Read temp set point
RU	Set max hot temp limit
RL:	Set min cold temp limit
RS:	Set temp set point
RD:	Head up/down
RC:	Control type 0=air 1=dut
RW:	0 - air off 1 - go to temp
RY:	Ignored